

# **BOXCHIP S700 DMR Instruction**

## **1. Configure DMR**

- I Revise DMR channel list and DMR contact list in excel
- li Copy DMR channel list and contact list in the terminal
- lii Import DMR channel list and Contact list

## **2. Upgrade DMR firmware**

## **3. DMR feature instruction**

## **4. "More" Feature instruction**

# 1.Configure DMR

## I. Revise DMR channel list and DMR contact list in excel

### 1.1.Revise DMR channel list in excel 《PTT\_CHANNEL\_LIST\_DATA.xls》

ID	Name	channelType	Channel	TX	RX	POWER	CC	InboundSlot	OutboundSlot	Contacttype	Contactnumber	Contactname	SQ	CTCSS_TYPE	CTX	CRX	CDCSS_CTX	CDCSS_CRX	CDCSS_RE_CTX	CDCSS_RE_CRX	
1	A	Digit	01	400.100000	400.100000	0	1	0	0	1	801	contact person 1									
2	B	Digit	01	400.220000	400.220000	0	2	0	0	1	802	contact person 2									
3	C	Digit	01	420.360000	420.360000	0	3	1	1	1	803	contact person 3									
4	D	Digit	01	435.666600	435.666600	1	4	1	1	0	666	group 1									
5	E	Digit	01	450.888880	450.888880	1	5	1	1	0	333	group 2									
6	G	Analog	09	466.452700	466.452700								0	0	1						
7	H	Analog	09	460.120000	460.120000								1	1			25	25			
8	I	Analog	09	425.456123	425.456123								2	2					75	75	
9	G	Analog	09	409.065000	409.065000								3	2					70	70	
10	K	Analog	09	409.025000	409.025000								4	3	0	0	0	0	0	0	0

Channel have digital and analog, use issue any channel in excels,Please attention,

Red for digital, Green for analog.The content in the list is sample version,User can revise

any base on rule.Please read the rule before filling DMR configurate file.

1."id" can change to any words or empty

2."name" can change any name,max length is 8 bits including symbol or blank

3."Channel Type ",type "Digit" or "Analog"

4."Channel ", When Digital type "01" , Analog type "09"

5."TX RX"must be number , UHF"400MHZ-470MHZ" or "VHF"136-174MHZ",Must

including "." The format is 409.065000

6."POWER" accpet type"0"or"1" , "0"for low power , "1"for high power

7."CC" is color code. number form "1-15" ( don't accpet other number )

8."InboundSlot,OutboundSlot "number must be the same , "0" for 1 time slot , "1" for 2

time slot.

9."SQ" is squelch level, type "0-9" ( can't accpet others number )

"10.""Contacttype"" means channel contact type,""1"" for private call, ""0"" for group

call ( can't accept other data )

11. : ""Contactnumber"" means channel contact ID, Max is 16777215, Can't be empty.

12 : ""Contactname"" means channel contact name, It can't over 15bits"

13. CTCSS\_TYPE: ""0"", just need fill ""CTX ""and ""CRX"", type""0-50"" ( can't accept others number )

CTCSS\_TYPE: ""1"", just need fill ""CDCSS\_CTX"" and ""CDCSS\_CRX""  
"", type""0-82""

CTCSS\_TYPE: ""2"", just need fill ""CDCSS\_RE\_CTX ""and ""CDCSS\_RE\_CRX"",  
type""0-82""

CTCSS\_TYPE: ""3"", for close, all data about CTCSS type ""0""

Remark: Every CTCSS frequency are insteaded of a CTCSS No.

Please read the CTCSS type No list in second page"

CTCSS_TYPE	0	1	2
Type No.	CTCSS	CDCSS_CTX	CDCSS_RE_CTX
0	62.5 Hz	023N	023I
1	67.0 Hz	025N	025I
2	69.3 Hz	026N	026I
3	71.9 Hz	031N	031I
4	74.4 Hz	032N	032I
5	77.0 Hz	043N	043I
6	79.7 Hz	047N	047I
7	82.5 Hz	051N	051I
8	85.4 Hz	054N	054I
9	88.5 Hz	065N	065I
10	91.5 Hz	071N	071I
11	94.8 Hz	072N	072I
12	97.4 Hz	073N	073I
13	100.0Hz	074N	074I
14	103.5Hz	114N	114I
15	107.2Hz	115N	115I
16	110.9Hz	116N	116I
17	114.8Hz	125N	125I
18	118.8Hz	131N	131I
19	123.0Hz	132N	132I
20	127.3Hz	134N	134I

Sheet1 CTCSS Type No. list +

14. Please attention, all data must be valid in every line

**Please attention:**

1. Don't change the file name.
2. Please keep other line empty in this file.

1.2 Revise DMR contact list in excel 《CONTACTLIST.xls》

ID	name	number	contact_type	encryption	belonggroup	password
1	contact person 1	801	1	1	666	123456
2	contact person 2	802	1	1	666	
3	contact person 3	803	1	1	333	
4	contact person 4	804	1	1	333	
5	contact person 5	805	1	1	999;666	
6	contact person 6	806	1	1	999;333	
7	group 1	666	0	1		
8	group 2	333	0	1		
9	group 3	999	0	1		

Contact list is about the configurate of contact ID and group ID,after configurate successfully,then set the local ID on terminal. the system will match all groups about local ID automatic

- 1."ID" can type any words or empty
  - 2."name" is contact name or group name. User can type any name,max length is 8 bits including symbol or blank
  - 3."number" just accept number,max 16777215
  - 4."contact\_type". the type of private call is "1",group talk is "0"
  - 5."encryption"only accept type"1"
  - 6."belonggroup",it is for the contact person belong which group.if it belong different groups,please type the group's number in the "belonggroup", if different groups,please use ";" separate them as sample version
  - 7."password"will be instead of terminal default password. Original password:123456.
- Password can accept Number and words, max 8 bits,and can't be empty.


Please attention:

3. Don't change the file name.
4. Please keep other line empty in this file.

## II. Copy channel list and contact list files into terminal root directory when connect with PC.

User can delete 《PTT\_CHANNEL\_LIST\_DATA.xls》 and excel 《CONTACTLIST.xls》 after finished import into device.


2.1 Power on terminal, connect type C USB with PC, Open "my computer" choose S700 as picture below.

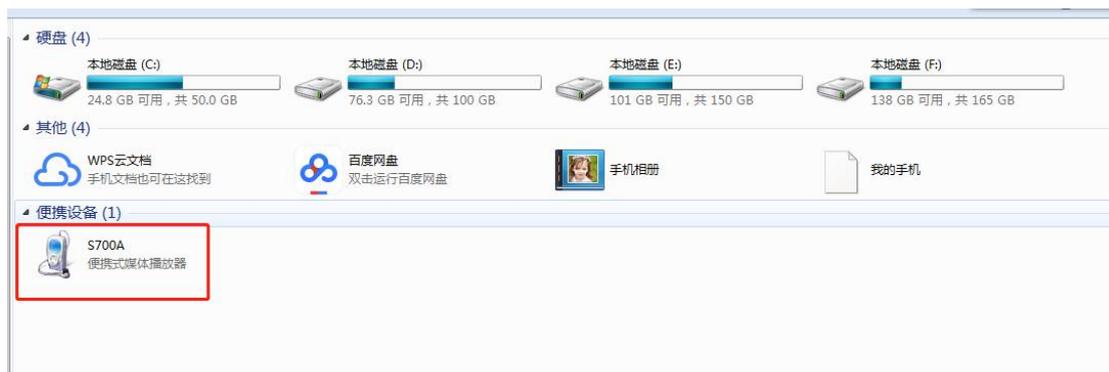

Enter in, You will find



2.2 Copy the two files excel 《PTT\_CHANNEL\_LIST\_DATA.xls》 and excel 《CONTACTLIST.xls》 inside the terminal root directory. Disconnect the USB cable now.

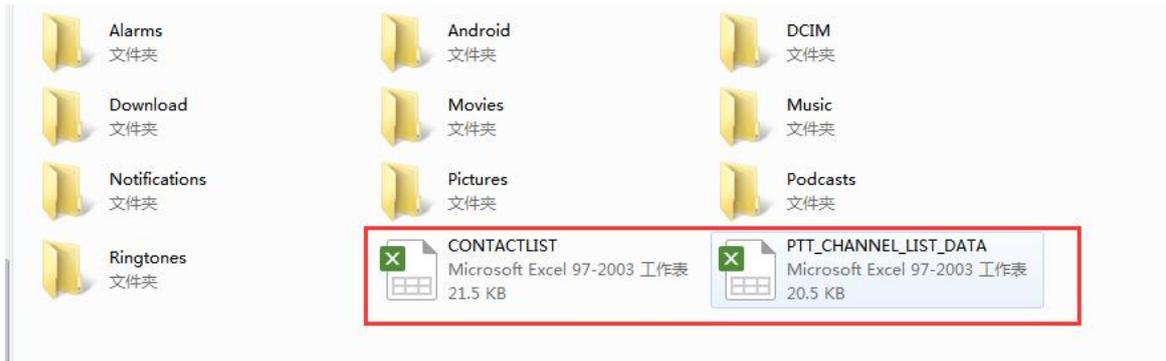


### III.Import DMR channel and contact

3.1 Choose” PTT” APK in main menu of terminal. Enter in “PTT”,choose “More” menu.


Click in, choose “import channels and contacts”. Then choose”into contact and channel”

as pictures of below.

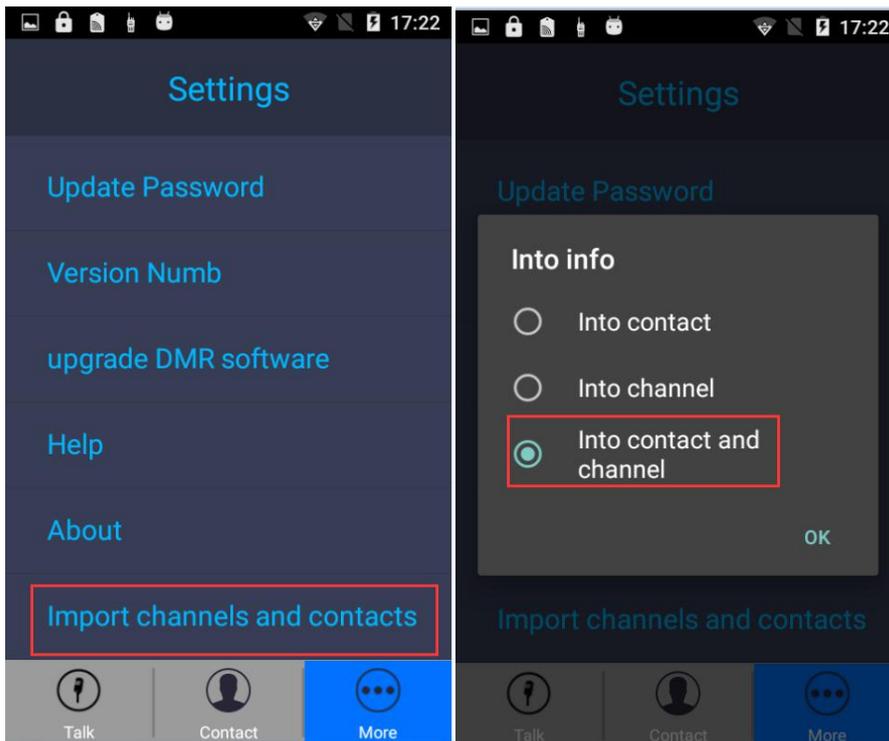

3.2 Until import successfully, the contact menu can check all imported contact list ,“More”

menu can check the imported channel list

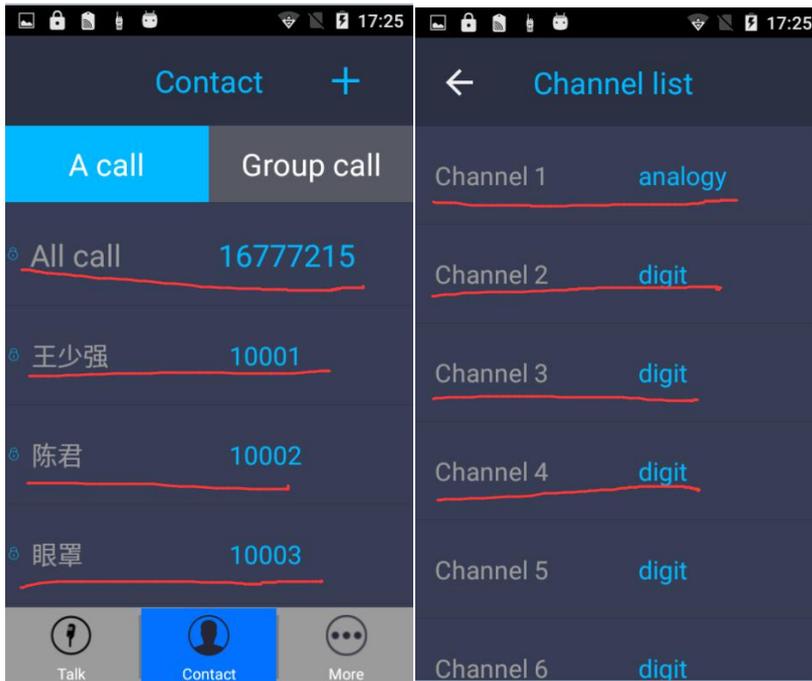


## 2. Upgrade DMR firmware


Connect terminal with PC, Put new DMR firmware inside the root directory of terminal.

The DMR firmware name must be **form Boxchip**


**Attention: If imported contact list and channel list. Then before importing contact list and channel list again, Please clear DMR cache file.**

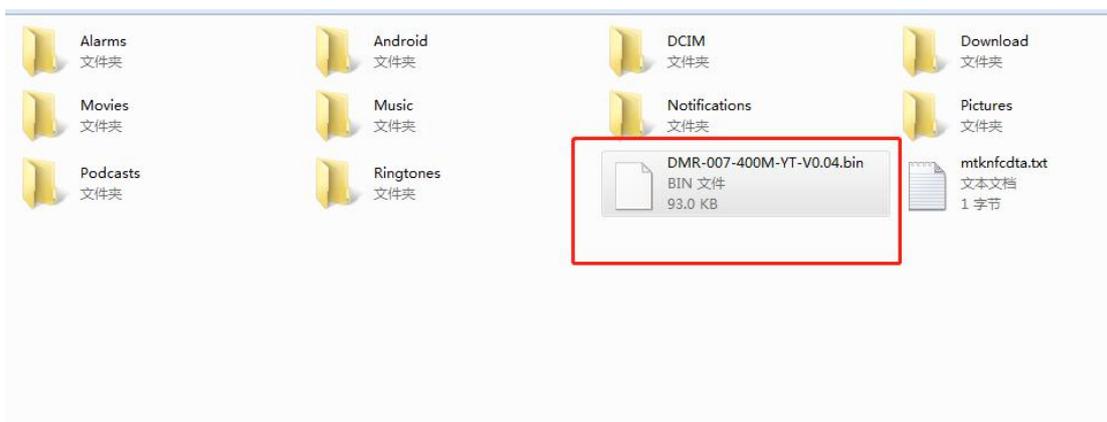


### 2.2 Clear DMR cache file.

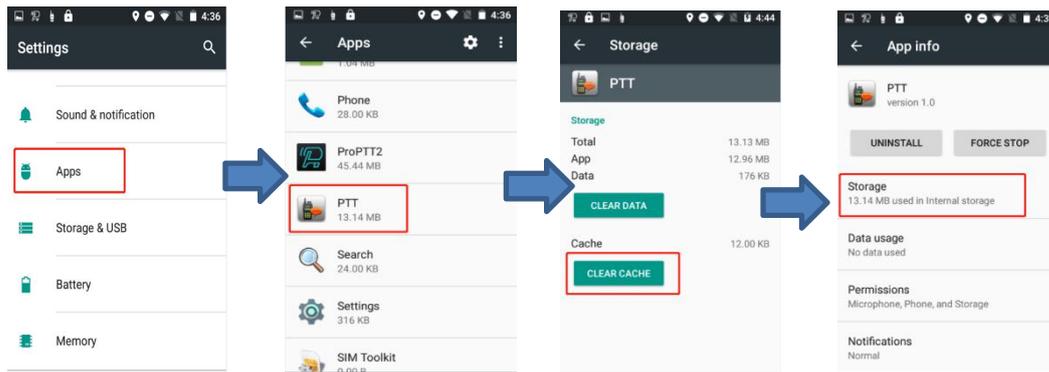


2.3 Power on terminal, click” PTT” for DMR application.Choose “more”,then click”upgrade DMR software” then choose “yes”,starting upgrade.

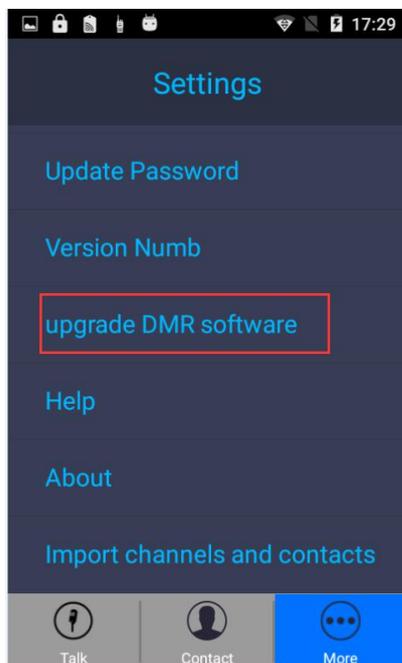

2.4 Please do waiting ,Before finish update the pictures as follow.Do not move before importing successfully.Finish upgrade. The system will be out automatic.

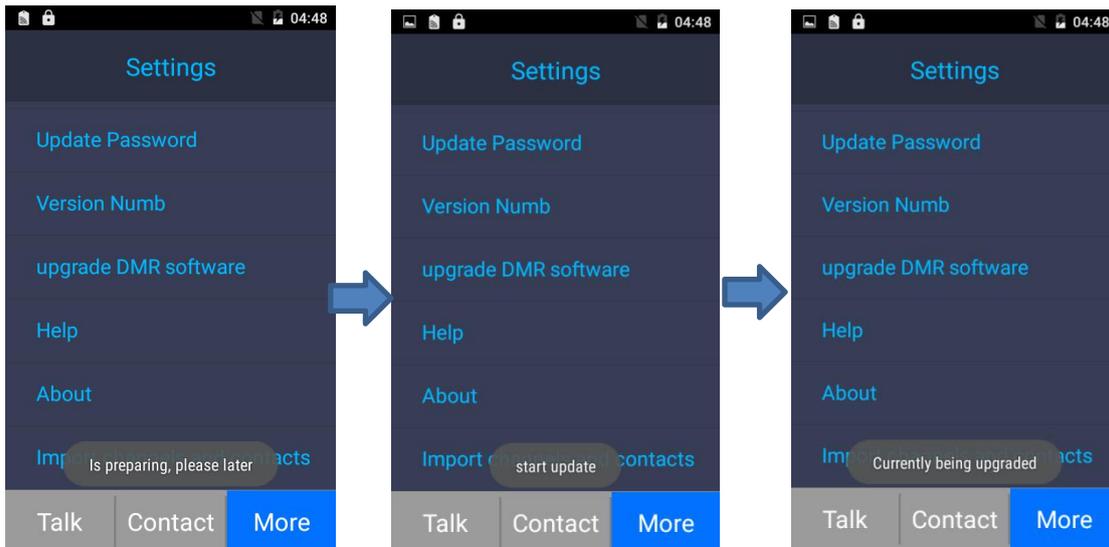

2.5 Choose “PTT” again, check “More”, the newest firmware will be update as the version we install.

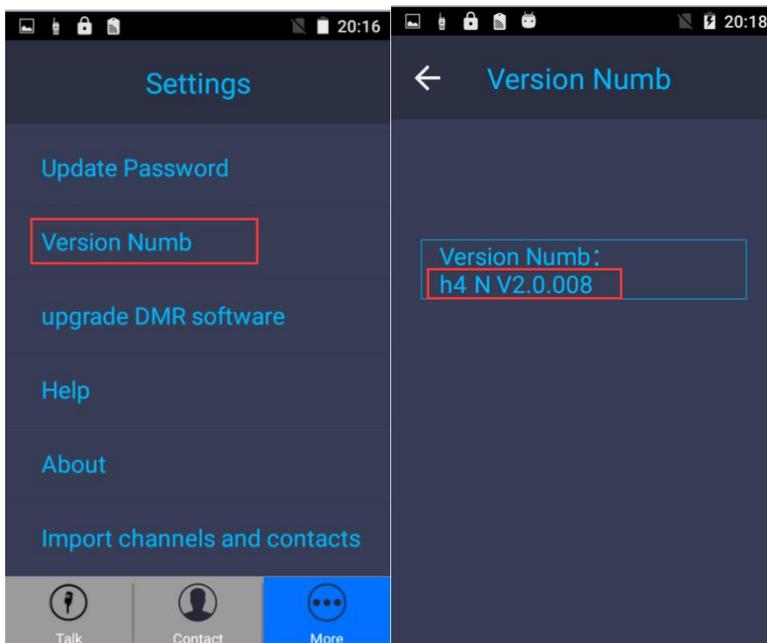


### 3. DMR feature

#### 3.1 type DMR local ID

3.11. Open “PTT” DMR application at first time, need type local ID, local ID is “888” by

default.Original password is “123456”.User can revise the local new ID, then input the password to revise new local ID. Can't be empty.

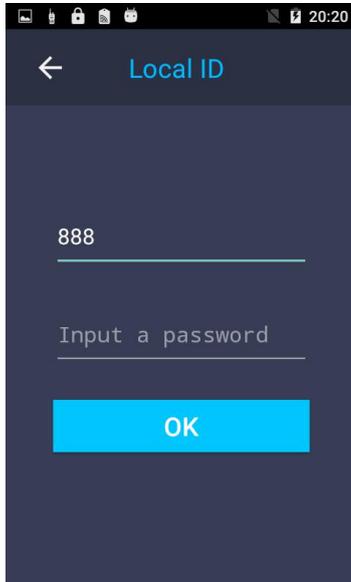


### 3.2 Menu

DMR application menu:Talk,contact,More



### 3.3 Talk :

Talk main menu,Display channel name and the RX side.When TX out, the ID of RX will be displayed in the main menu. If the system can't match the contact name, the system will display the ID of RX side. The left speaker menu can adjust the volume.

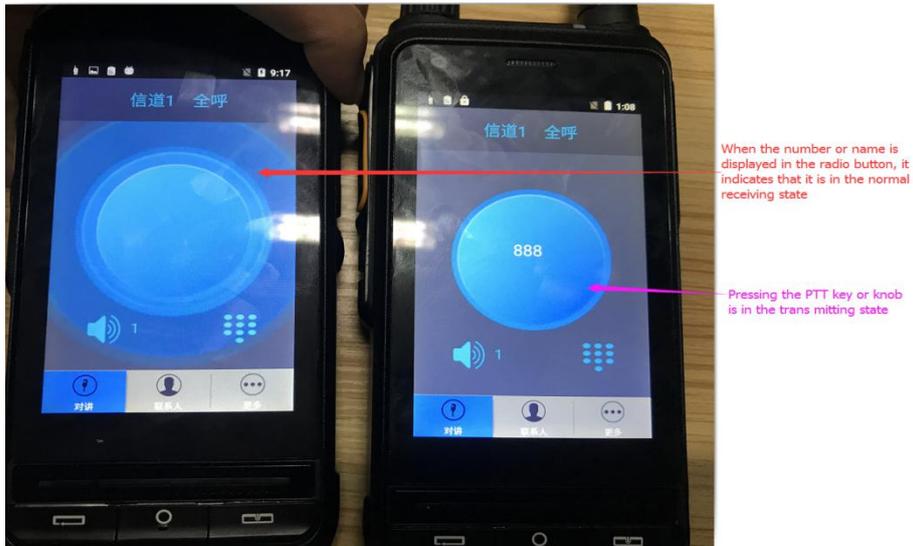


### 3.4 Import contact list.

“Contact” menu have “a call” and “Group call”.


The contact people and contact group form importing by PC with a lock icon as picture.

All contact with lock can't be deleted.

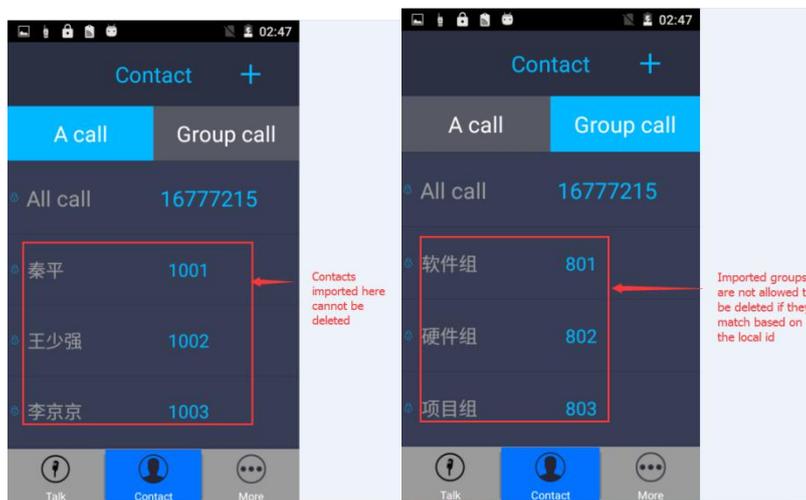

### 3.5 Contact import by hand through terminal


Add contact and add group as picture,” import all information in system,then type “yes”.

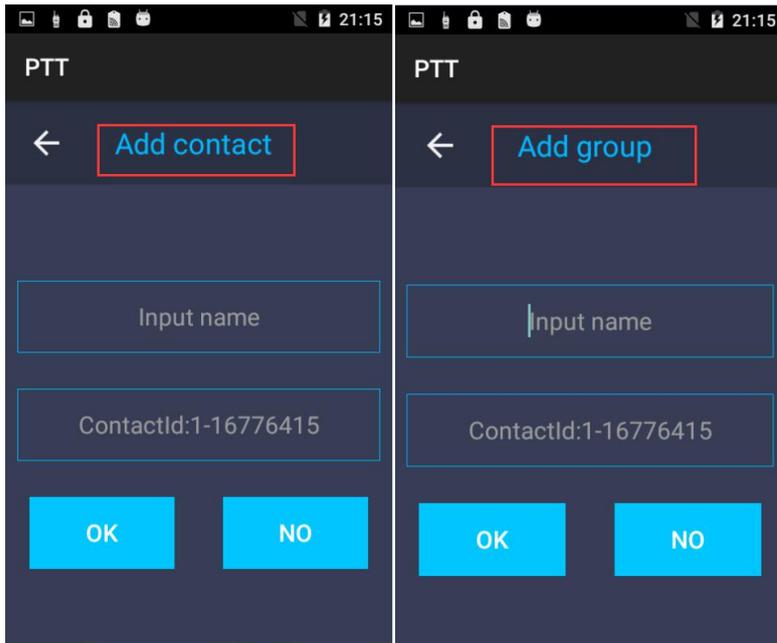

3.6 Contact feature :

All contact which import through terminal,user can delete them by long press .

All contact can choose talk or SMS

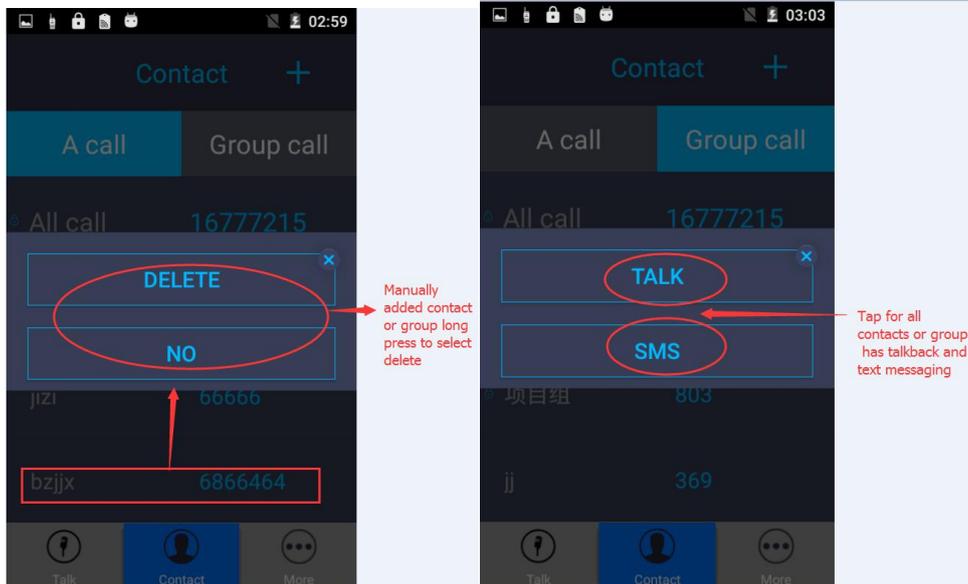


Group talk for just TX side and RX side inside one group,Make sure all group have the same channel setting

## 4. More menu.


Including local ID, contact recordings, SMS, channel list, channel parameter, update password, firmware No. Update DMR version, help, about, import channel list and contact.

4.1 revise local ID, We already mention as above.

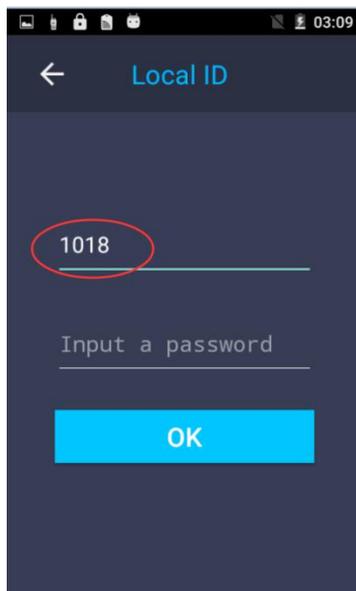


4.2 Recording:

Recording list display DMR recording.including TX and RX message.

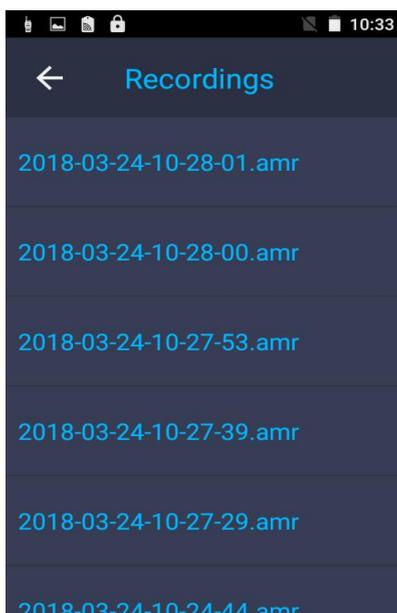


### 4.3 SMS:

SMS list display all message before, enter in, can read all record.Long press,can be deleted.

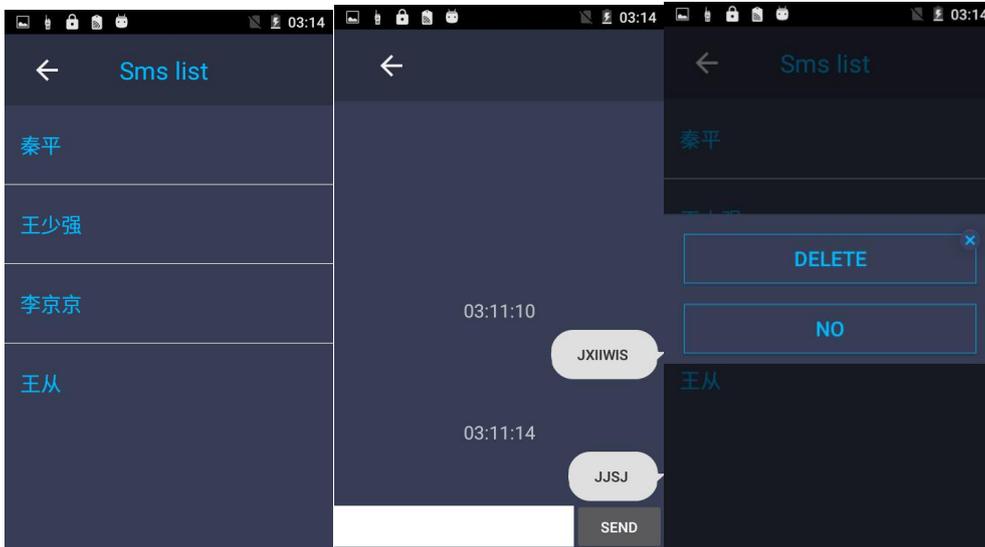

### 4.4 Channel list :


Imported channel list, can't be deleted, but edit temporarily, password is"123456"by default before revising new password when import contact list by PC.

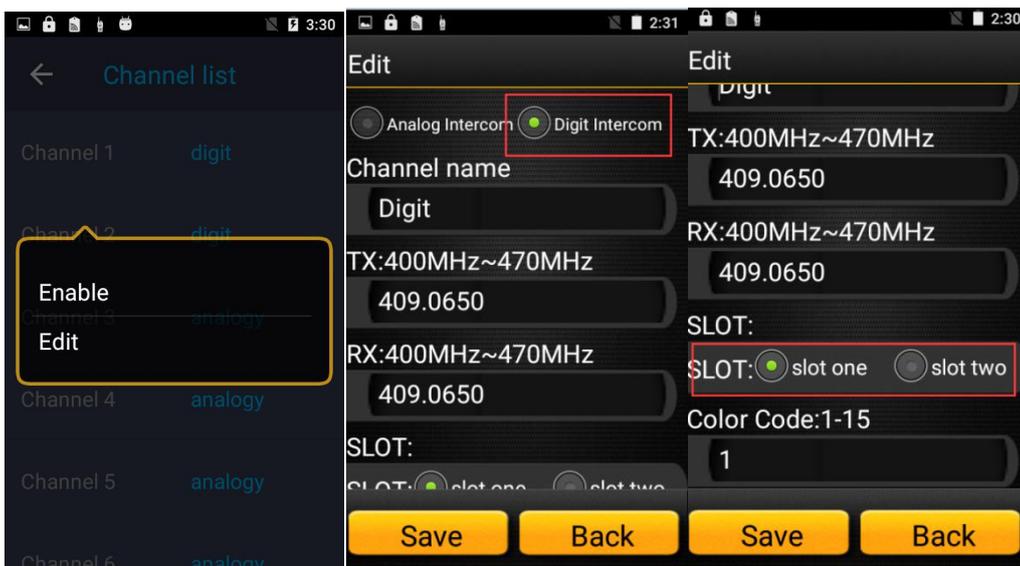

### 4.5 Channel parameter :


When checking local channel parameter, press password.then can revise the date.

The original password is “1123456”by default.

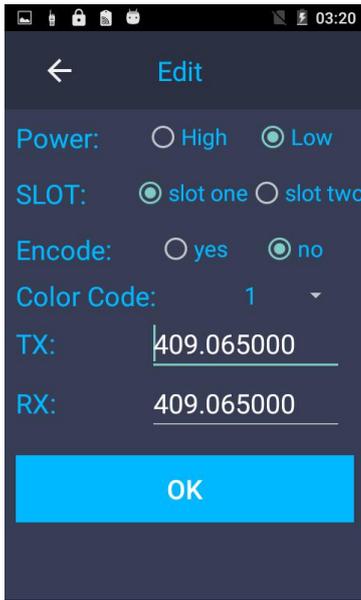


4.6 update password :

The password is 123456 by default.

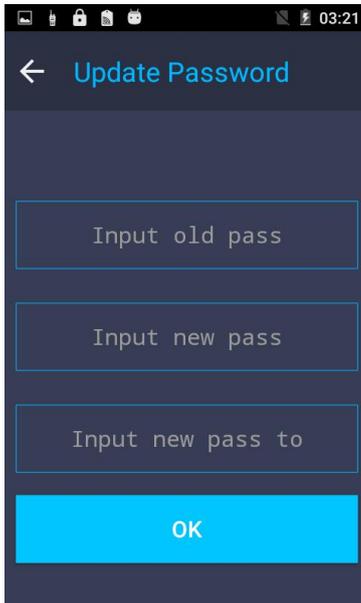


4.7 DMR version Numb :

Checking DMR version Number

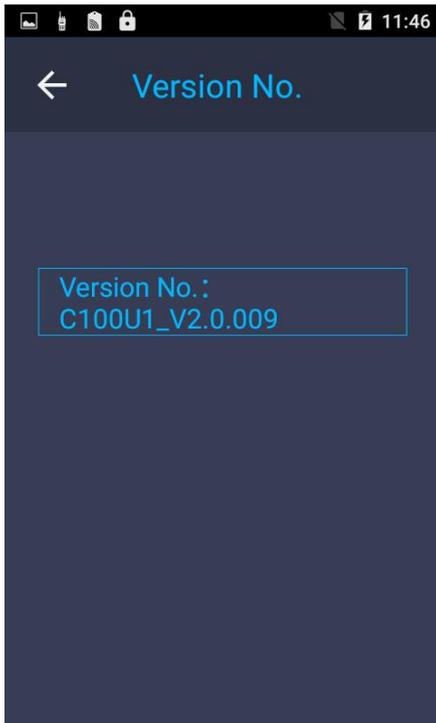

4.8 Update DMR firmware.we mention above

4.9 Help :

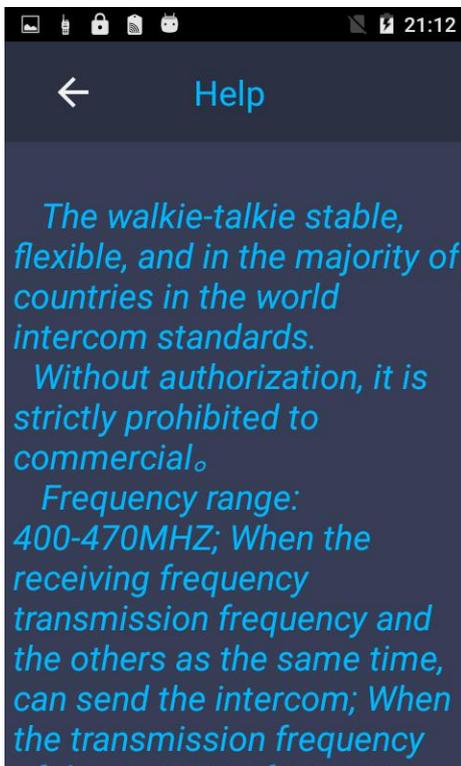

#### 4.10 About :

Display manufacture and DMR version No.



#### 4.11 Import DMR channel and contact.

Open DMR application, press the menu "More", choose into contact and channel. We mention above

